



SpiderControl™
MICROBROWSER

**Embedded
Edition**

LPC4357

TCI-Artikel-Nr.: 15693



iniNet . Erfolgreiche Kunden

E-mail: info@ininet.ch, www.ininet.ch, Tel: +41 61-716 96 26

Contents

LICENSE AGREEMENT	5
1. LICENSE TO USE.....	5
2. GOVERNING LAW.....	5
3. DISCLAIMER OF WARRANTY.....	5
4. RESTRICTIONS.....	5
5. LIMITATION OF LIABILITY.....	5
6. TERMINATION.....	5
INTRODUCTION	6
FIRST STEPS	7
PAGE: SETTINGS MENU	8
START URL.....	8
NETWORK SETTINGS.....	8
ADVANCED SETTINGS.....	8
INFO.....	8
LOAD DEFAULT SETTINGS.....	8
REBOOT.....	8
START.....	9
PAGE: START URL	10
START PAGE.....	10
START URL.....	10
PING.....	10
PRE-LOAD ALL VIEWS.....	10
SHOW LOADING MESSAGE.....	10
PAGE: NETWORK SETTINGS	11
IP ADDRESS, DHCP, SUBNET MASK AND GATEWAY.....	11
DNS.....	11
NETWORK DEVICE.....	11
PAGE: ADVANCED SETTINGS I	12
SCREEN BRIGHTNESS.....	12
AUTO MODE.....	12
TURN OFF BACKLIGHT.....	12
AUTOMATIC SCALING.....	12
DISPLAY ORIENTATION.....	12
PAGE: ADVANCED SETTINGS II	13
RETURN TO SETUP PAGE.....	13
ENABLE UNDO.....	13
SKIP SETUP PAGE.....	13
CHECK FOR PROJECT UPDATE.....	13
ETHERNET SPEED.....	13
TOUCH CALIBRATION.....	13
PAGE: ADVANCED SETTINGS III	14
SHOW VNC NAVIGATION BUTTONS.....	14
RESIZE PICTURES IN CACHE.....	14
GREEN LED STARTUP VALUE.....	14
RED LED STARTUP VALUE.....	14
BOARD TEMPERATURE [°C].....	14
EXTERNAL TEMPERATURE [°C].....	14
EXTERNAL TEMPERATURE OFFSET [°C].....	14
REMOTE ACCESS PASSWORD.....	15
PAGE: ADVANCED SETTINGS IV	16
USE TIME ZONE AND DAYLIGHT SAVING.....	16
SELECTED TIME ZONE.....	16
TIME ZONE GMT OFFSET.....	16
DAYLIGHT SAVING GMT OFFSET.....	16
START / END CONFIGURATION.....	16
START MONTH.....	16
EARLIEST START DAY.....	17
START HOUR : START MINUTE.....	17
END MONTH.....	17
EARLIEST END DAY.....	17
END HOUR : END MINUTE.....	17

PAGE: CLOUD SETUP	18
TUNNEL NAME	18
PAGE: FILE SYSTEM	19
FREE SPACE	19
REFRESH	19
ERASE HMI	19
PAGE: INFO	20
FIRMWARE VERSION	20
BOOTLOADER VERSION	20
MICROBROWSER VERSION	20
PLATFORM	20
DISPLAY	20
MAC ADDRESS	20
NETWORK DEVICE	20
LICENSE INFO	20
SOFTWARE UPDATE	20
PAGE: SOFTWARE UPDATE	21
CHECK FOR UPDATE ONLINE	21
CHECK FOR UPDATE LOCALLY	21
PERFORMANCE CONCERNS	22
AVOID IMAGE SCALING	22
PERIOD TIME	22
CODESYS VISUALIZATIONS	23
UNSUPPORTED FEATURES	23
GOING BACK TO SETUP MENU	23
SPECIAL VARIABLE IN CODESYS 2	23
VARIABLE: SPC_MB_BACKLIGHT	23
VARIABLE: SPC_MB_CLOCK	23
VARIABLE: SPC_MB_GREENLED	24
VARIABLE: SPC_MB_REDLed	24
SPECIAL VARIABLE IN CODESYS 3	24
VARIABLE: @MB_LPC_BACKLIGHT	24
VARIABLE: @MB_LPC_CLOCK	24
VARIABLE: @MB_LPC_GREENLED	25
VARIABLE: @MB_LPC_REDLed	25
DEVICE MANAGEMENT FUNCTIONS	26
EXPORT CONFIGURATION	26
DEFAULT CONFIGURATION	26
SOFTWARE UPDATE	26
FONT UPLOAD	26
CHANGE PASSWORD	26
REBOOT	27
IMPORT CONFIGURATION	28
EXPORT CONFIGURATION	29
DEFAULT CONFIGURATION	30
SOFTWARE UPDATE	31
FONT UPLOAD	32
CHANGE PASSWORD	33
WEB SERVER INTERFACE	34

License Agreement

READ THE TERMS OF THIS AGREEMENT AND ANY PROVIDED SUPPLEMENTAL LICENSE TERMS (COLLECTIVELY "AGREEMENT") CAREFULLY BEFORE OPENING THE SOFTWARE MEDIA PACKAGE. BY OPENING THE SOFTWARE MEDIA PACKAGE, YOU AGREE TO THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO ALL THESE TERMS, PROMPTLY RETURN THE UNUSED SOFTWARE TO YOUR PLACE OF PURCHASE.

1. LICENSE TO USE

ININET GRANTS YOU A NON-EXCLUSIVE AND NON-TRANSFERABLE LICENSE LIMITED TO THE INTERNAL USE OF THE ACCOMPANYING SOFTWARE AND DOCUMENTATION AND ANY ERROR CORRECTIONS PROVIDED BY ININET SOLUTIONS GMBH (COLLECTIVELY "SOFTWARE").

2. GOVERNING LAW

THIS AGREEMENT SHALL BE GOVERNED BY THE LAWS OF KANTON BASELSTADT, SWITZERLAND.

3. DISCLAIMER OF WARRANTY

THIS SOFTWARE AND THE ACCOMPANYING FILES ARE SOLD "AS IS" AND WITHOUT WARRANTIES AS TO PERFORMANCE OR MERCHANTABILITY OR ANY OTHER WARRANTIES WHETHER EXPRESSED OR IMPLIED. BECAUSE OF THE VARIOUS HARDWARE AND SOFTWARE ENVIRONMENTS INTO WHICH ININET SOLUTIONS MAY BE PUT, NO WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE IS OFFERED. GOOD DATA PROCESSING PROCEDURE DICTATES THAT ANY PROGRAM BE THOROUGHLY TESTED WITH NON-CRITICAL DATA BEFORE RELYING ON IT. THE USER MUST ASSUME THE ENTIRE RISK OF USING THE PROGRAM. ANY LIABILITY OF THE SELLER WILL BE LIMITED EXCLUSIVELY TO PRODUCT REPLACEMENT OR REFUND OF PURCHASE PRICE.

4. RESTRICTIONS

SOFTWARE IS CONFIDENTIAL AND COPYRIGHT. THE TITLE OF ANY SOFTWARE AND ALL ASSOCIATED INTELLECTUAL PROPERTY RIGHTS ARE RETAINED BY ININET SOLUTIONS GMBH AND/OR ITS LICENSORS. YOU MAY NOT MAKE COPIES OF SOFTWARE OTHER THAN A SINGLE COPY OF SOFTWARE FOR ARCHIVAL PURPOSES. YOU MAY NOT MODIFY, DECOMPILE, AND REVERSE ENGINEER SOFTWARE. SOFTWARE IS NOT DESIGNED OR LICENSED FOR USE IN ON-LINE CONTROL OF AIRCRAFT, AIR TRAFFIC, AIRCRAFT NAVIGATION OR AIRCRAFT COMMUNICATIONS; OR IN THE DESIGN, CONSTRUCTION, OPERATION OR MAINTENANCE OF ANY NUCLEAR FACILITY. YOU WARRANT THAT YOU WILL NOT USE SOFTWARE FOR THESE PURPOSES.

5. LIMITATION OF LIABILITY

TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT WILL ININET SOLUTIONS GMBH OR ITS LICENSORS BE LIABLE FOR ANY LOST REVENUE, PROFIT OR DATA, OR FOR SPECIAL, INDIRECT, CONSEQUENTIAL, INCIDENTAL OR PUNITIVE DAMAGES, HOWEVER CAUSED REGARDLESS OF THE THEORY OF LIABILITY, ARISING OUT OF OR RELATED TO THE USE OF OR INABILITY TO USE SOFTWARE, EVEN IF ININET SOLUTIONS GMBH HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

IN NO EVENT WILL ININET SOLUTIONS GMBH'S LIABILITY TO YOU, WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE), OR OTHERWISE, EXCEED THE AMOUNT PAID BY YOU FOR SOFTWARE UNDER THIS AGREEMENT. THE FOREGOING LIMITATIONS WILL APPLY EVEN IF THE ABOVE STATED WARRANTY FAILS ITS ESSENTIAL PURPOSE.

6. TERMINATION

THIS AGREEMENT IS EFFECTIVE UNTIL TERMINATED. YOU MAY TERMINATE THIS AGREEMENT AT ANY TIME BY DESTROYING ALL COPIES OF SOFTWARE. THIS AGREEMENT WILL TERMINATE IMMEDIATELY WITHOUT NOTICE FROM ININET SOLUTIONS GMBH IF YOU FAIL TO COMPLY WITH ANY PROVISION OF THIS AGREEMENT. UPON TERMINATION, YOU MUST DESTROY ALL COPIES OF SOFTWARE.

Java is a registered trademark of Sun Microsystems Inc.
Solaris is a registered trademark of Sun Microsystems Inc.
Windows NT/95/98/ME/2000/XP and WinCE are registered trademarks of Microsoft Inc.
Mac OS is a registered trademark of Apple Inc.
OS/2 is a registered trademark of IBM Inc.
Pentium is a registered trademark by Intel Inc.

Introduction

This manual applies to the embedded version of the MicroBrowser running on LPC4357 controller.

The SpiderControl™ MicroBrowser is able to run Web-HMI's that are directly loaded from an embedded Web-server on a PLC or another controller device.

The MicroBrowser is compatible with projects designed with the SpiderControl™ editor, a compatible OEM version of the SpiderControl™ editor or with CoDeSys WebVisu 2.x and CoDeSys 3.x. This device can also be configured as a VNC client.


First Steps

Right after the device is powered on a view appears to calibrate the touch-screen. Press the screen to start the touch-screen calibration routine. This option is shown first and makes sure that this feature can be selected even if the calibration is completely odd.

If the calibration routine was started by mistake don't press anything. The routine will stop after 10 seconds automatically.

Next the Ethernet adapter is initialized.

Shortly after the next view appears:

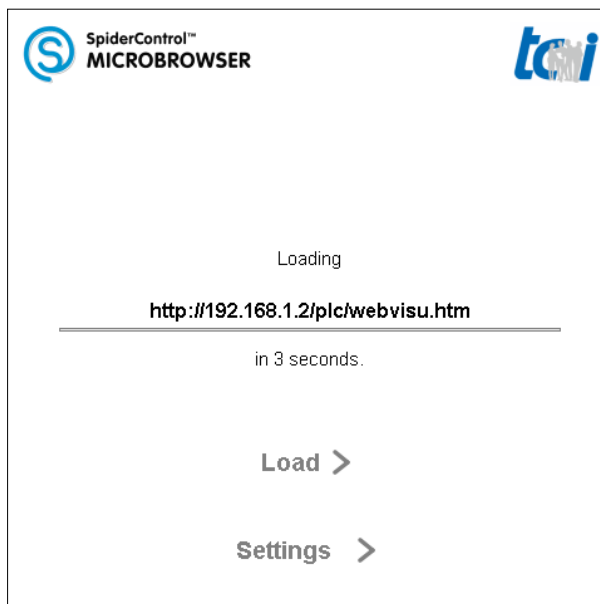

Press on 'Settings' to access the configuration menu of the panel.


Press on the URL to directly go to the configuration page of the PLC's URL.

If no action is taken, the panel will automatically continue by loading the URL that has been previously configured. If this URL cannot be found, this page will be shown again and the system will try to reconnect again.

Press 'Load' to directly load the URL without waiting for the timeout.

If you don't see this page than the option Skip setup page under Settings/Advanced Settings/ may be enabled. Try to unplug the Ethernet cable and restart the device.

Page: Settings Menu

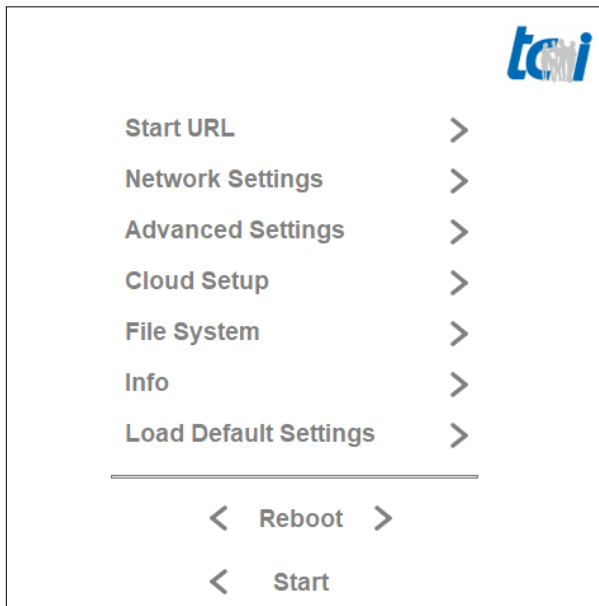

Start URL

Page to enter the URL of the PLC.

Network Settings

Page to enter the network configuration of the panel.

Advanced Settings

Page to set advanced settings.

Cloud Setup

Contains cloud settings.

File System

Shows content of file system.

Info

Show various information about the panel.

Load Default Settings

This can be used to restore the default settings.


Reboot

Press this button to reboot the panel. This may be needed to reinitialize the Ethernet setting.

Start

Go back to the previous page.

Page: Start URL

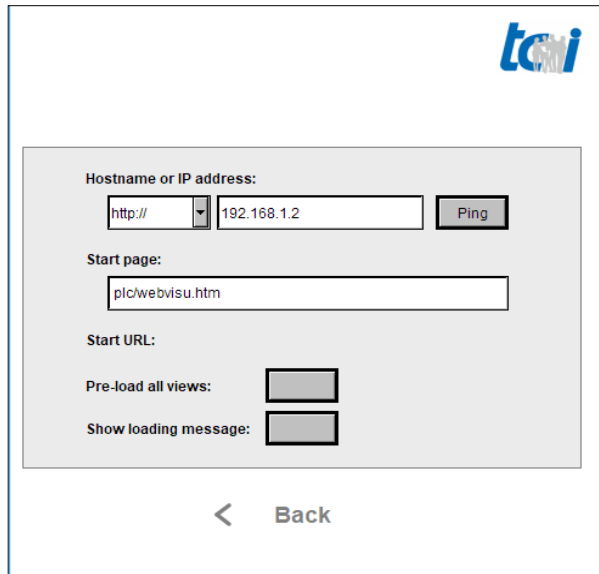

Hostname or IP address

The first line asks for the IP-Address or host name of the target system where the HMI is located. Alternatively to an IP address a symbolic host name can be entered. With the drop-down menu on the left a different protocol can be selected. If "VNC:/" is selected the device acts as a VNC client. Examples: "192.168.1.2" or "www.myhost.com"

Start Page

The 'Start Page' field should contain the HTML-file name of the HMI including the path information. Please use '/' as separator. In the VNC case this field can be used to enter the authentication password. Examples: "start.html" or "plc/webvisu.htm"

Start URL

In this read-only field the composed URL is shown.

Ping

By clicking on this button a ping command is sent to the host.


Pre-load all views

By selecting this option all views and image files are pre-loaded. This will increase the loading time, but reduce the time between page jumps.

Show loading message

If enabled system shows loading messages during file load process.

Page: Network Settings

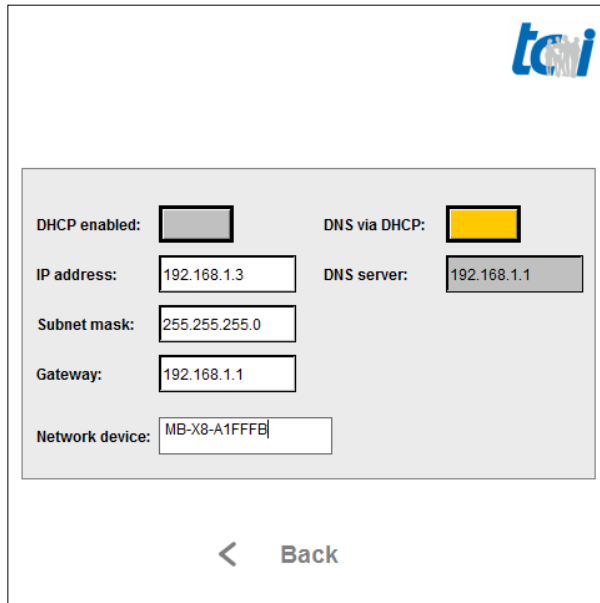

The screenshot shows a web interface for network settings. At the top right is the 'tci' logo. Below it is a form with the following fields:

DHCP enabled:	<input type="checkbox"/>	DNS via DHCP:	<input checked="" type="checkbox"/>
IP address:	<input type="text" value="192.168.1.3"/>	DNS server:	<input type="text" value="192.168.1.1"/>
Subnet mask:	<input type="text" value="255.255.255.0"/>		
Gateway:	<input type="text" value="192.168.1.1"/>		
Network device:	<input type="text" value="MB-X8-A1FFFFB"/>		

At the bottom center of the form is a '< Back' button.

IP address, DHCP, subnet mask and gateway

Choose whether the IP address of the panel should be static or dynamic. For static (DHCP disabled) enter the desired IP address, subnet mask and, optionally, a gateway in the corresponding field.


DNS

Enable 'DNS via DHCP' if there is a DHCP server in your network, that tells the address of the DNS server. Disable it if you have a DNS server but no DHCP server. In this case enter the address in the 'DNS server' field.

Network device

This field contains the network name which helps to identify the device in network.

Page: Advanced Settings I

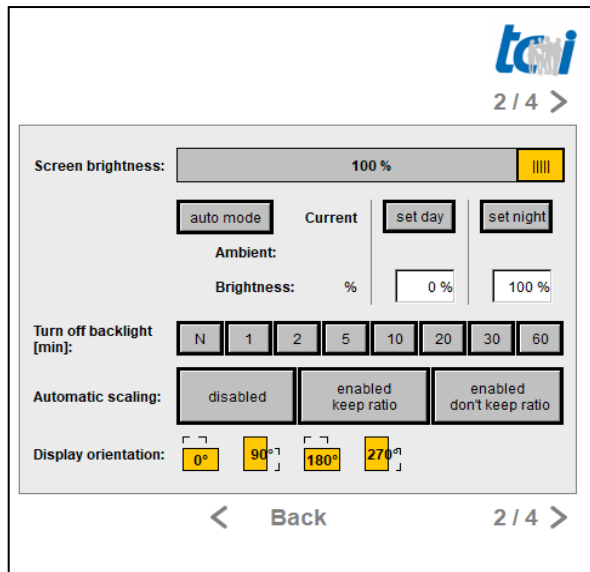

Screen brightness

Change here the screen brightness. This value is used when the “auto mode” is not set.

Auto mode

In auto mode the screen brightness is set automatically according to the ambient brightness. Push “set day” or “set night” to read the actual value of the ambient sensor if available and set the desired screen brightness.

Turn off backlight

This sets a time constant, after which the backlight is automatically switched off if the display is not in use (no touch events are registered). This setting is set in minutes. 'N' means never / disabled.

Automatic scaling

If disabled the HMI is drawn 1:1 (scale factor 1) on the panel. Elements positioned outside the screen resolution are omitted.

'enabled, keep ratio' scales the HMI to the screen resolution. The view will be stretched or shrunk and the ratio is kept.

'enabled, don't keep ratio' scales the HMI to the screen resolution. The view will be stretched or shrunk and the ratio is not kept.

Display orientation

Display content can be rotated for 90°, 180° or 270°.

Page: Advanced Settings II

The screenshot shows the 'Advanced Settings II' page with the following settings:

- Return to setup page after touching screen for [s]: N, 5, 10 (5 is selected)
- Enable undo:
- Skip setup page:
- Check for project update [min]: N, 1, 2, 5, 10, 20, 30, 60 (N is selected)
- Ethernet speed: read-only: 100 Mbit Full-Dupl., 100Mbit Half-Dupl., 10 Mbit Full-Dupl., 10 Mbit Half-Dupl. (100 Mbit Full-Dupl. is selected)
- Show analysis info:
- Touch calibration:

Return to setup page

If enabled, when touching the screen for the given value the panel jumps back to the setup menu.

This setting is set in seconds. 'N' means never / disabled.

Enable undo

If disabled, the actions defined on an element are always executed, even if the touch (mouse UP event) is released outside this element.

If enabled, the actions of an element are only executed, if the touch (mouse UP event) is released inside this element.

Skip setup page

Enable this option if you want to skip the setup page.

If neither the HMI nor the settings gives you the possibility to return to the setup page, unplug the Ethernet cable and restart the device.

Check for project update

The panel is able to check, whether a HMI has been updated. In this case the HMI is re-loaded automatically. This sets the interval between the checks. The time must be at least as long as the time needed to upload the whole project.

This setting is set in minutes. 'N' means never / disabled.

Ethernet Speed

Shows the Ethernet speed.

Touch calibration

Press this button to start the calibration routine of the touch-screen.

Page: Advanced Settings III

The screenshot shows the 'Advanced Settings III' page in the tci interface. The page is numbered 4/4 and has a 'Back' button. The settings are:

- Show VNC navigation buttons:
- Resize pictures in cache:
- Green LED startup value:
- Red LED startup value:
- Board Temperature [°C]:
- External Temperature [°C]:
- External Temperature Offset [°C]:
- Remote Access Password:

Show VNC navigation buttons

If enabled system shows navigation options pen and shift buttons in VNC window.

Resize pictures in cache

Changes size of pictures in cache to avoid resizing during every screen redraw. This function optimizes speed of system.

Green LED startup value

Startup value of green status led after panel software reboot.

Red LED startup value

Startup value of red status led after panel software reboot.

Board Temperature [°C]

Temperature of PCB processor board.

External Temperature [°C]

Temperature value of external temperature sensor.

External Temperature Offset [°C]

Set the value of offset so that the external temperature match the environment temperature.

Remote Access Password

Press button to reset remote access password to default value 'admin12345'.

Page: Advanced Settings IV

Use Time Zone and Daylight Saving:

Selected Time Zone: User defined ▼

Time Zone GMT Offset [sec]: 3600

Daylight Saving GMT Offset [sec]: 7200

Start / End Configuration: Start ▼

Start Month: March ▼

Earliest Start Day: 25

Start Weekday: Sunday ▼

Start Hour : Start Minute: 2 : 0

Use Time Zone and Daylight Saving

Enable system for calculating date and time with Time Zone and Daylight Saving settings.

Selected Time Zone

Select your Time Zone or select 'User defined' to config your own Time Zone parameters.

Time Zone GMT Offset

Defines the time difference in seconds between Time Zone and GMT time.

Daylight Saving GMT Offset

Specifies the time difference between Time Zone and GMT time.

Start / End Configuration

Switch between settings for Start/End of Daylight Saving.

Start Month

The month where Daylight Saving is beginning.

Earliest Start Day

Beginning with the earliest start day the Time Zone / Daylight Saving algorithm is checking for Start Weekday, Start Hour and Start Minute. If all values are matching, Daylight Saving correction will start.

Start Hour : Start Minute

Defining the start hour and start minute of Daylight Saving begin. The time values are defined in local time of Time Zone.

End Month


The month where Daylight Saving is ending.

Earliest End Day

Ending with the earliest end day the Time Zone / Daylight Saving algorithm is checking for Start Weekday, Start Hour and Start Minute. If all values match, Daylight Saving correction will end.

End Hour : End Minute

Defining the end hour and end minute of Daylight Saving end. The time values are defined in local time of Time Zone.

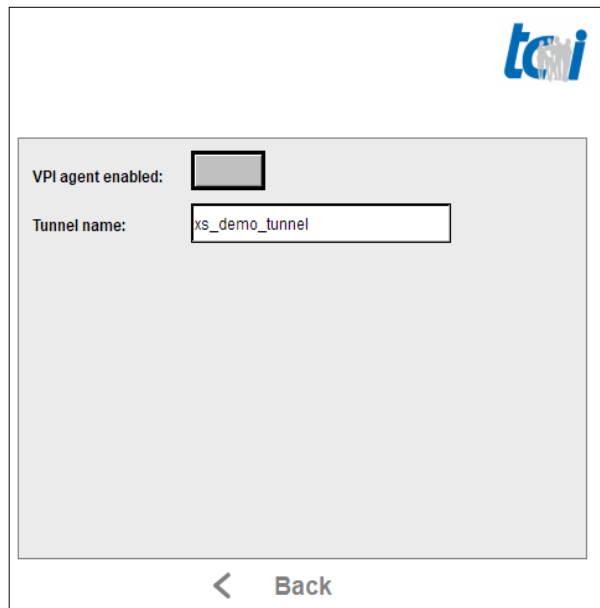

Page: Cloud Setup

VPI agent enabled

The VPI system allows a remote user to connect on panel. Please ask for further information or a demo setup:


iniNet Solutions GmbH
Fichtenhagstrasse 2
CH-4132 Muttenz (Switzerland)
mailto: info@ininet.ch
Tel: +41 61-716 96 26

Tunnel name

The unique tunnel is necessary for VPI remote connect. Please ask for further information or a demo setup:

iniNet Solutions GmbH
Fichtenhagstrasse 2
CH-4132 Muttenz (Switzerland)
mailto: info@ininet.ch
Tel: +41 61-716 96 26

Page: File System

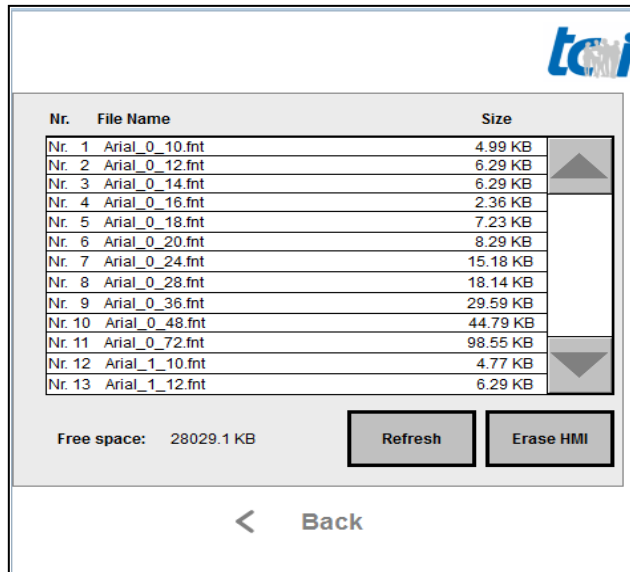

The screenshot displays a user interface for a file system. At the top right is the 'tai' logo. Below it is a table with three columns: 'Nr.', 'File Name', and 'Size'. The table lists 13 files. Below the table, the 'Free space' is shown as 28029.1 KB. There are two buttons: 'Refresh' and 'Erase HMI'. At the bottom, there is a 'Back' button with a left-pointing arrow.

Nr.	File Name	Size
Nr. 1	Arial_0_10.fnt	4.99 KB
Nr. 2	Arial_0_12.fnt	6.29 KB
Nr. 3	Arial_0_14.fnt	6.29 KB
Nr. 4	Arial_0_16.fnt	2.36 KB
Nr. 5	Arial_0_18.fnt	7.23 KB
Nr. 6	Arial_0_20.fnt	8.29 KB
Nr. 7	Arial_0_24.fnt	15.18 KB
Nr. 8	Arial_0_28.fnt	18.14 KB
Nr. 9	Arial_0_36.fnt	29.59 KB
Nr. 10	Arial_0_48.fnt	44.79 KB
Nr. 11	Arial_0_72.fnt	98.55 KB
Nr. 12	Arial_1_10.fnt	4.77 KB
Nr. 13	Arial_1_12.fnt	6.29 KB

Free space: 28029.1 KB

Refresh Erase HMI

< Back

Free space

Shows free space of internal flash memory.


Refresh

Updates flash file system information.

Erase HMI

Deletes HMI files from internal flash memory file system.

Page: Info

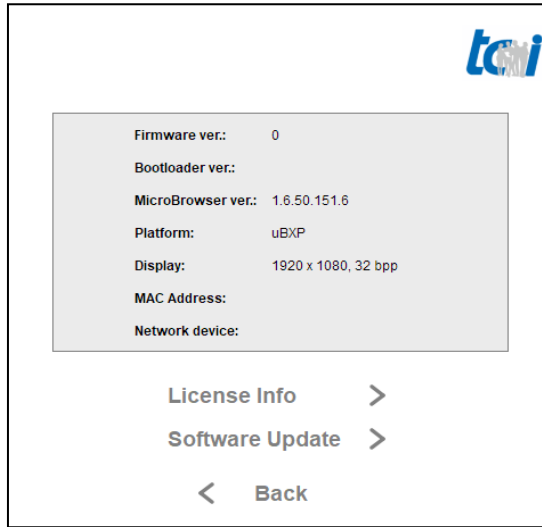

Firmware version

Firmware version of the panel.

Bootloader version

Firmware version of bootloader.

MicroBrowser version

Version of the MicroBrowser.

Platform

Name of the platform, ex. MCB-XS6-WVGA.

Display

Screen resolution and color depth of the panel.

MAC Address

MAC address of the panel.

Network device

Name of the device inside the network.

License Info

Shows license info text.

Software Update

Press this button to perform a software update of the panel.

Page: Software Update

SpiderControl™
MICROBROWSER

tci

Check for Update Online:

Check Online

Check for Update Locally:

URL:

Check Locally

< Back

Check for Update Online

The panel will look on the internet if a new firmware is available.

Requirements: The panel is connected to the internet and a DNS server is configured.

Check for Update Locally

The panel will look on a specified host if a new firmware is available.

The latest firmware and the instruction can be found here:
<http://www.ininet.ch/public/MicroBrowser/Amena/index.html>

Requirements: The host is running and contains the needed files.

Performance Concerns

In the chapter you will find some hints and tricks to achieve the best performance on the embedded device.

Avoid Image Scaling

Image scaling can be time-consuming on embedded devices. Try to avoid it.

This can be achieved by following these points:

- Disable the automatic scaling in the advanced settings.
- Prepare your images in such a way that a scaling is not necessary, i.e. adapt the image size in an image editor.
- For SpiderControl: disable the image property "Adjust Image".
- For CoDeSys: set the image frame style to "fixed".

Period Time

The period time can affect the usability of the device. If the device needs more time for a cycle than the set period, the time for touch-handling can be very short. In this case consider incrementing the period time.

For SpiderControl: see "Project Setting" > "Period"
For CoDeSys: see "webvisu.htm" > "UPDATETIME"

CoDeSys Visualizations

Unsupported Features

The MicroBrowser supports visualizations designed with CoDeSys 2.x.

The following elements are NOT supported:

- ~~Font styles underline and strikethrough~~
- ~~Frame style other than solid~~
- Tooltip-display
- Keyboard shortcuts
- Run external program
- Watchlists / Receipts

Going Back To Setup Menu

There is a possibility to configure a button to go back to the setup page. To do so, configure a button with the intern command: "INTERN EXITPROGRAM" (in the tab "input->Execute program").

Special Variable in CoDeSys 2

The following variables can be defined in CoDeSys 2 to enable specific functions on the panel. They all begin with the prefix "SPC_MB_".

These variables must appear in a view in any way. For example in a rectangle element in the textdisplay-variable field. This element can be hidden. The best way is to insert these elements in the start view, mostly PLC_VISU.

A demo project showing the use of these variables is available at <http://ininet.ch/public/MicroBrowser/Amena/index.html>.

Variable: SPC_MB_Backlight

With the variable "SPC_MB_Backlight", it is possible to control the backlight of the embedded device.

CoDeSys definition: SPC_MB_Backlight:BOOL;

Variable value:

- 0: the device behaves as normal, i.e. it switches the backlight off after a given timeout.
- 1: the backlight stays permanently on.

Variable: SPC_MB_Clock

The panel doesn't have an internal clock. By defining the variable "SPC_MB_Clock", it is possible to set the time and date of the panel. This can be used for trend elements.

CoDeSys definition: SPC_MB_Clock:DT;

Variable value:

Variable: SPC_MB_GreenLed

With the variable "SPC_MB_GreenLed", it is possible to control the green status led of the embedded device.

CoDeSys definition: SPC_MB_GreenLed:BOOL;

Variable value:

- 0: disable the green led
- 1: enable the green led

Variable: SPC_MB_RedLed

With the variable "SPC_MB_RedLed", it is possible to control the red status led of the embedded device.

CoDeSys definition: SPC_MB_RedLed:BOOL;

Variable value:

- 0: disable the red led
- 1: enable the red led

Special Variable in CoDeSys 3

The following variables can be set in CoDeSys 3 to enable specific functions on the panel. You need to write a special command in a text field on webvisu. It is possible to use e.g. white text on white background to hide this message.

You need to display following string @@"Variable-Name"="Variable-Value" where Variable-Name is the name of variable and Variable-Value is value of variable.

Variable: @MB_LPC_Backlight

With the variable "@MB_LPC_Backlight", it is possible to control the backlight of the embedded device.

Example display text in CoDeSys 3: @@"@MB_LPC_Backlight"="1"

Variable value:

- 0: the device behaves as normal, i.e. it switches the backlight off after a given timeout.
- 1: the backlight stays permanently on.

Variable: @MB_LPC_Clock

The panel doesn't have an internal clock. By defining the variable "@MB_LPC_Clock", it is possible to set the time and date of the panel. This can be used for trend elements.

Write text in CoDeSys 3: @@"@MB_LPC_Clock"="1514764800"

Variable value:

The PLC application is responsible to periodically write the current time (Unix Timestamp) in this variable.

Variable: @MB_LPC_GreenLed

With the variable "@MB_LPC_GreenLed", it is possible to control the green status led of the embedded device.

Example display text in CoDeSys 3: @@"@MB_LPC_GreenLed"="1"

Variable value:

- 0: disable the green led
- 1: enable the green led

Variable: @MB_LPC_RedLed

With the variable "SPC_MB_RedLed", it is possible to control the red status led of the embedded device.

Example display text in CoDeSys 3: @@"@MB_LPC_RedLed"="1"


Variable value:

- 0: disable the red led
- 1: enable the red led

Device Management Functions

Device management functions are available. You need to call IP address of panel with your PC web browser. You need to input remote login credentials. The remote access username is admin. Default password is admin12345.

The following menu appears:

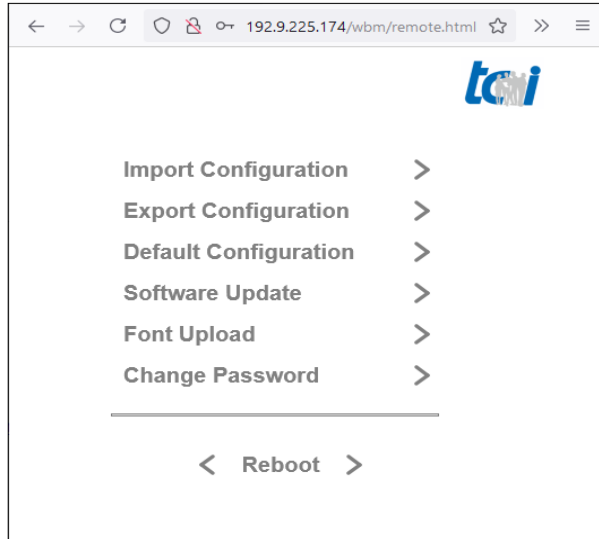

Import Configuration

Import and activate an existing configuration from PC.

Export Configuration

Export active configuration from panel to your PC.

Default Configuration

Overwrite factory reset values with current active configuration.

Software Update

Allows remote software update.

Font Upload

Upload new fonts to system.

Change Password


This option allows to change remote access password.

Reboot

Force a reboot of panel software.

Import Configuration

This menu allows to upload configuration file from external data storage. Press button 'Upload ini file' to select a configuration file stored on your local PC. In second step you need to press 'Load configuration' to set configuration as current active configuration and automatically as factory default.

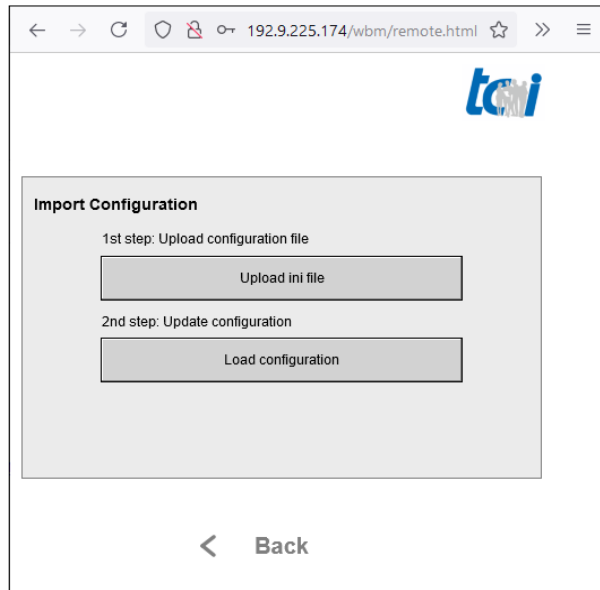


The screenshot shows a web browser window with the address bar displaying '192.9.225.174/wbm/remote.html'. The page features the 'tci' logo in the top right corner. The main content area is titled 'Import Configuration' and contains two steps:

- 1st step: Upload configuration file**
A button labeled 'Upload ini file' is positioned below the step description.
- 2nd step: Update configuration**
A button labeled 'Load configuration' is positioned below the step description.

At the bottom of the interface, there is a '< Back' button.


Export Configuration

Press button 'Download ini file' to export active configuration of panel to your local PC.

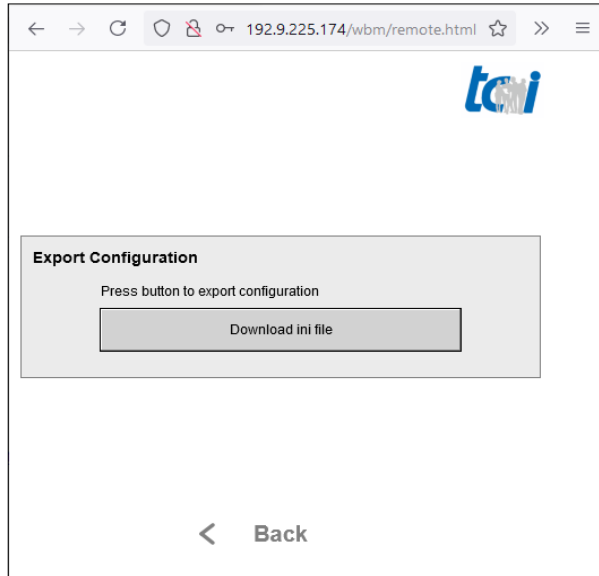

Default Configuration

Set active configuration as factory default. If you press Set configuration as default the old factory reset configuration will be replaced by latest active one.

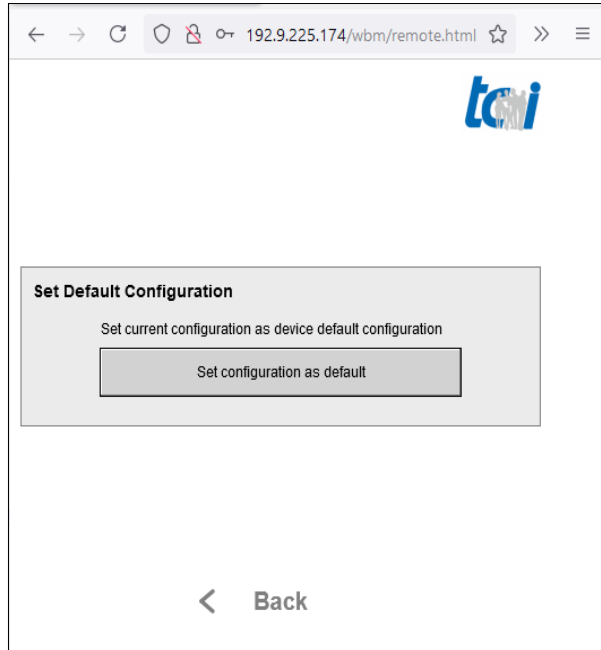


Software Update

Update panel firmware via remote interface. Press button Download firmware to get overview above new firmware files. Please download firmware with corresponding 'Platform id'.

The latest firmware can be found although here:


<http://www.ininet.ch/public/MicroBrowser/Amena/index.html>

Press button Upload bin file and select firmware update file with ending bin for upload to panel. Click on button "Start update" to start update process. Panel software will restart automatically after successful software update process.

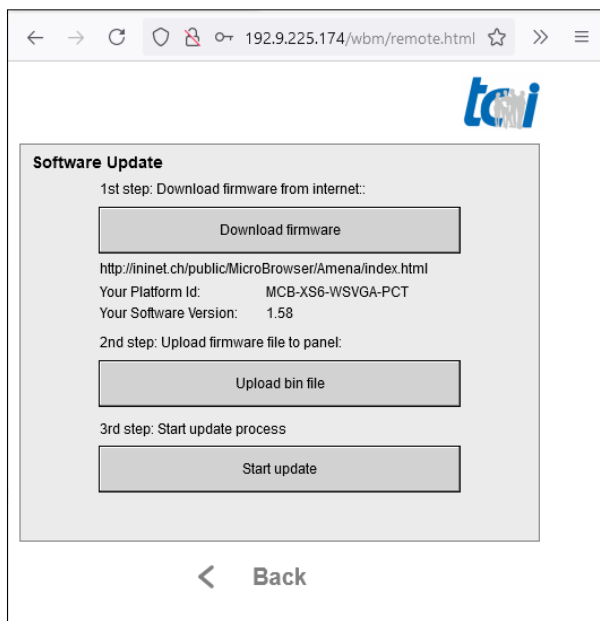


Font Upload

With function you can add new fonts. Select simple font file with ending fnt or a compressed zip archive with multiple fnt files to upload fonts to panel. Still existing fonts on target will be replaced without acknowledgment.

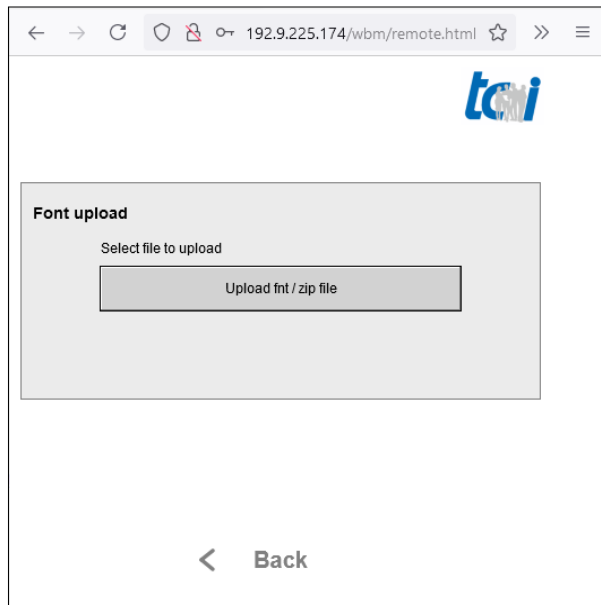

Change Password

To change remote access password you need to type old password. In step 2 you need to input new password and verify new password. To confirm changes you need to press “Change password”. After change of password you need to input new password credentials. This password is used although for FTP admin access to panel file system.

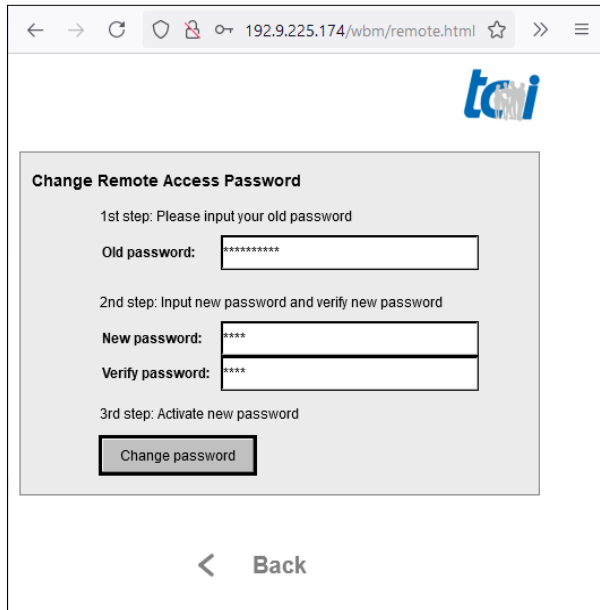

192.9.225.174/wbm/remote.html

toi

Change Remote Access Password

1st step: Please input your old password

Old password:

2nd step: Input new password and verify new password

New password:

Verify password:

3rd step: Activate new password

[Back](#)

Web Server Interface

The device management can be accessed by scripts. Therefore, you can use HTTP server interface. The WebServer is accessible on TCP port 80.

1. Sample:

Send firmware file with HTTP Post to webservice. Send HTTP GET commando to start firmware update process.

HTTP POST

MCB_XS6_WSVGA_PCT_V158.bin

HTTP GET

<http://192.9.225.174/cgi-bin/writeVal.cgi?StartUpdate=1>

2. Sample: If you want to import configuration ini file.

HTTP POST

mb_default_config.ini

HTTP GET

<http://192.9.225.174/cgi-bin/writeVal.cgi?LoadConfiguration=1>

3. Sample: Import font file.

HTTP POST

Arial_1_72.fnt

4. Sample: Reboot panel software

HTTP GET

<http://192.9.225.174/cgi-bin/writeVal.cgi?Reboot=1>